


A-810 LVLP AIR SPRAY GUN

Parts Diagram

L018-003 1,3MM

L018-004 1,7 MM

LEMMER

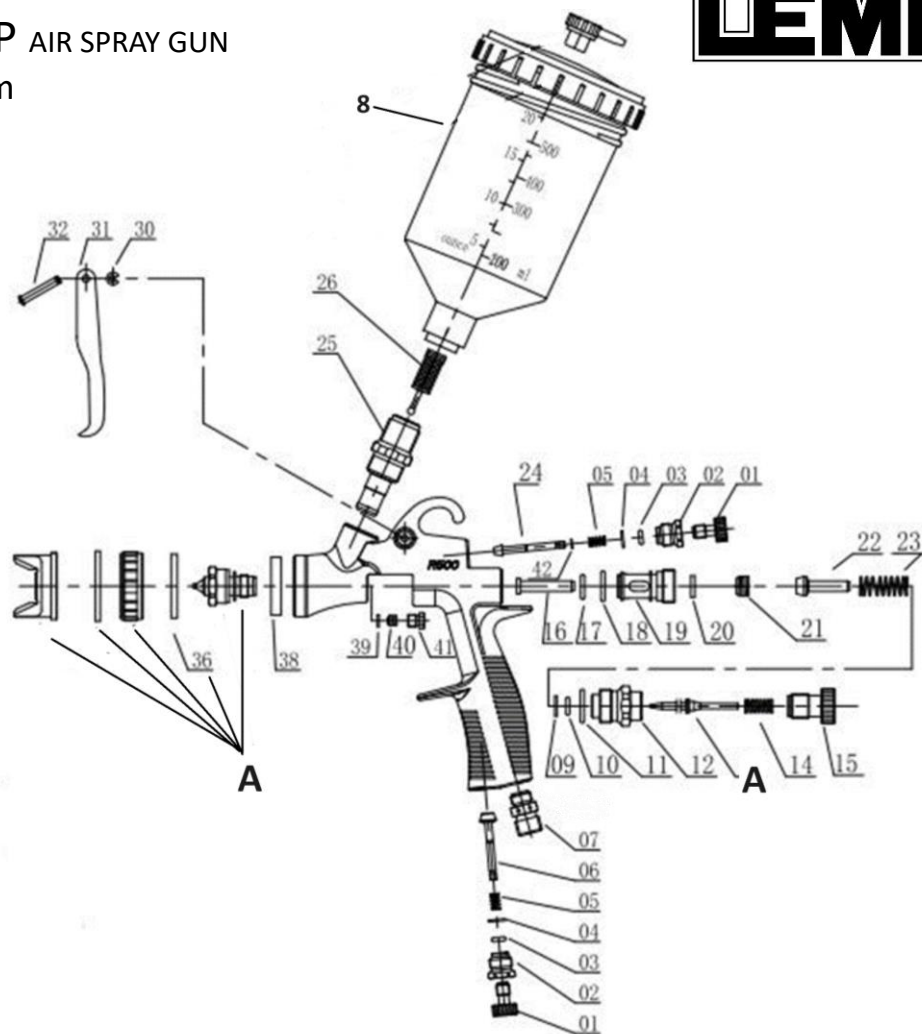

Pos.	Parts nos.	Description	Qty.
1	L018-009	Air Adj.Screw	2
2	L018-010	Air Adj.Knob	2
* 3	L018-011	O-ring 3.3x1.5	2
* 4	L018-012	Flat washer	2
* 5	L018-013	Air valve spring	2
6	L018-014	Air valve step	1
7	L018-015	Air inlet fitting	1
8	L015-475	Gravity cup nylon	1
* 9	L018-016	Flat washer	1
* 10	L018-017	O-ring 1.5x1.8	1
* 11	L018-018	O-ring 8.7x1.85	1
12	L018-019	Fluid Adj. Knob	1
14	L018-020	Fluid needle spring	1
15	L018-021	Fluid Adj. Screw	1
16	L018-022	Switch pole	1
* 17	L018-023	O-ring 8.5x1.2	1
* 18	L018-024	O-ring 8.7x1.85	1
19	L018-025	Needle housing	1
* 20	L018-026	Sealing washer	1
21	L018-027	Needle screw	1

Pos.	Parts nos.	Description	Qty.
* 22	L018-028	Air inlet valve pole	1
23	L018-029	Swith spring	1
24	L018-030	Atomization needle	1
25	L018-031	Fluid inlet Fitting	1
26	L015-684	Filter paq 5	1
30	L018-032	Snap retainer	1
31	L018-033	Trigger	1
32	L018-034	Pin	1
36	L018-035	Washer	1
* 39	L018-036	Washer	1
* 40	L018-037	Y Washer	1
41	L018-038	Direction screw	1
* 42	L018-039	Snap retainer	1

* L018-040 Seal kit A-810 (consisting of item marked*)

Pos.	Parts nos.	Description
A	L018-005	Nozzle Kit 1,3 mm
	L018-006	Nozzle Kit 1,5 mm
	L018-007	Nozzle Kit 1,7 mm
	L018-008	Nozzle Kit 2,0 mm