


Use pneumatic oil with this Lubrificator L034-121 pneumatic oil 1L

Frl ¼'' L090-309

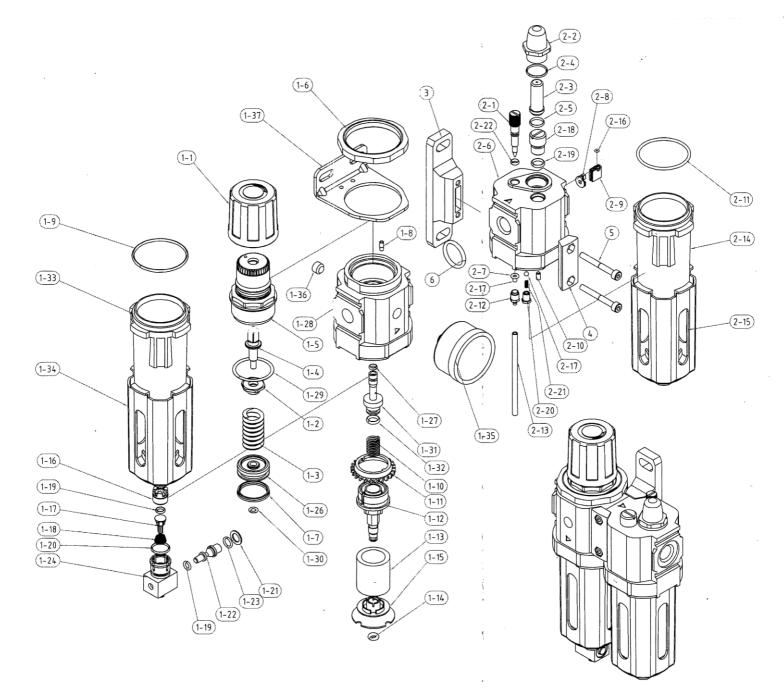

TEMOTY DESCRIPTION	ITEMOTY DESCRIPTION	TEMOTY DESCRIPTION	ITEMOTY DESCRIPTION	ITEMOTY DESCRIPTION
1 1 MAFR300	1-16 1 PIPE	1-33 1 CASE	2-11 1 0-RING	6 1 0-RING
1-1 1 HADLE	1-17 1 DRAIN VALVE	1-34 1 CASE GUARD	2-12 1 CHECK VAL. BODY	
1-2 1 SPR.RESTRAINER	1-18 1 DRAIN VALVE SPRING	1-35 1 PRESSURE GAUGE 1015-453	2-13 1 SIPHON TUBE	
1-3 1 ADJUST.SPRING	1-19 2 0-RING	1-36 1 PLUG	2-14 1 CASE	
1-4 1 ADJ.SCREW	1-20 1 0-RING	1-37 1 BRACKET	2-15 1 CASE GUARD	
1-5 1 BONNET	1-21 1 RING	2 1 MAL300	2-16 1 0-RING	
1-6 1 QWEXFCC	1-22 1 PUSH BUTTON	2-1 1 NEEDLE VALVE	2-17 2 BALL	
1-7 1 PISTON PACKING	1-23 1 0-RING	2-2 1 OUTER DOME	2-18 1 FEED PLUG	
1-8 1 SUCTION PIPE	1-24 1 DRAIN VAL.BODY	2-3 1 INNER DOME	2-19 1 0-RING	
1-9 1 0-RING	1-26 1 PISTON	2-4 1 0-RING	2-20 1 AIR NOZZLE	
1-10 1 VALVE SPRING	1-27 1 0-RING	2-5 1 0-RING	2-21 1 C.VALVE.SPR.	
1-11 1 DEFLE CTOR	1-28 1 BODY	2-6 1 BODY	2-22 1 O-RING	
1-12 1 VALVE SUPPORT	1-29 1 0-RING	2-7 1 0-RING	3 1 T BRACKET	
1-13 1 ELEMENT	1-30 1 0-RING	2-8 1 FLOW GUIDE	4 1 ATTACHMENT	
1-14 1 0-RING	1-31 1 VALVE	2-9 1 FLOWGUIDE HDR	5 2 Hexagon Socket Head	
1-15 1 BAFFLE	1-32 1 0-RING	2-10 1 SCREW	Cap Screw	

.